


How to Remove the Elbow Tubes to Shorten the Width of the T-Frame: Steps 1-5

Step 1) Unscrew the upper arm of the wing on the T-Frame.



Step 2) Unscrew the lower arm of the wing on the T-Frame.

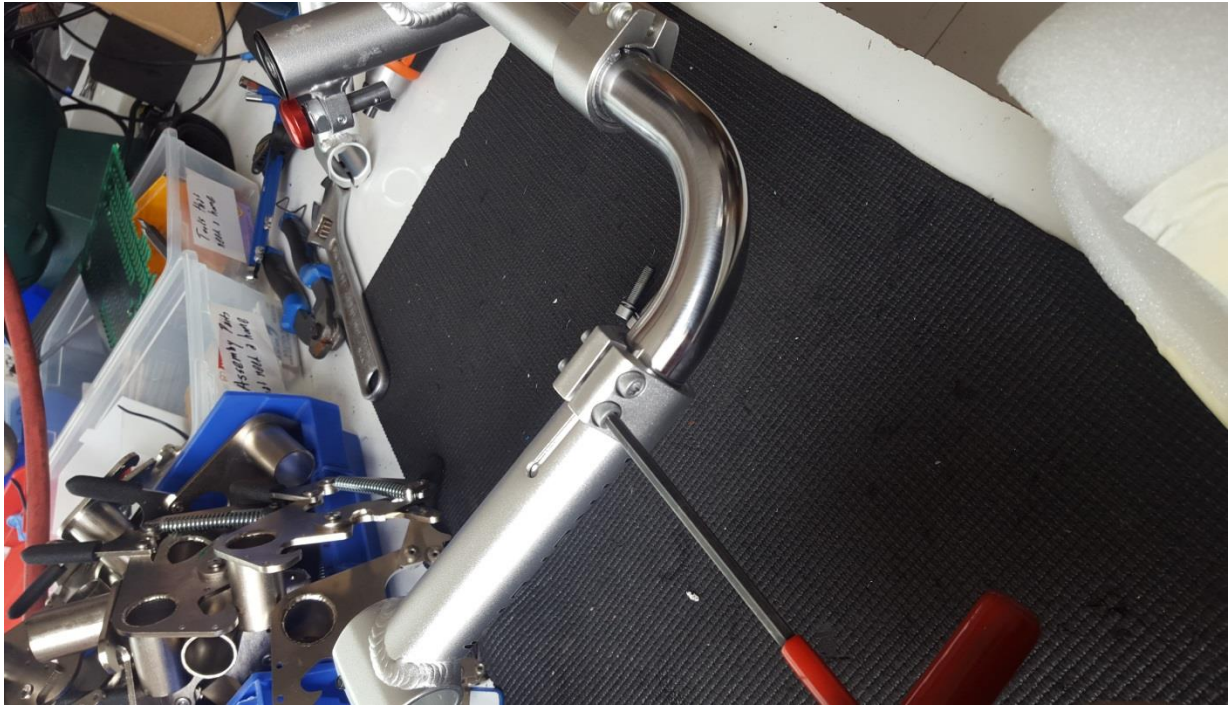

Step 3) Remove the Elbow tubes.



Step 4) Hold the Elbow tube in a V shape and determine which side is shorter.

Step 5) Place the shorter side into the T-Frame to minimize the width of the wings.

